



Mars Ceilpara / Poling / Table outdoor heater

Instruction Manual

Appropriate Country Testmark on Equipment

In accordance with the UK guidelines for safety	
In accordance with the Canada or USA guidelines for safety	
In accordance with the Russian Federation safety regulations.	
In accordance with the European guidelines for safety, CE / EMC / GS and IP55	
In accordance with the NZ/AU guidelines for safety, C-TICK, SAA	
This product has been manufactured to comply with EEC Directives 2006/95/EG and 89/336/EEC. No household waste. Must be disposed of in accordance with local regulations.	
This product is RoHS compliant	

Guarantee

We provide warranty in accordance with the legislation of the customer's own country of residence, with a 2 years starting from the date on which the appliance is sold to the end user. The warranty only covers defects in material or workmanship. The repairs under warranty may only be carried out by an authorized service centre. When making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted. The warranty will not apply in cases of:

- Normal wear and tear
- Incorrect use, e.g. overloading of the appliance, use of non-approved accessories
- Use of force, damage caused by external influences
- Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions
- Partially or completely dismantled appliances.

Guarantee excludes heating tubes.

Contents

Safety instructions	1
General information - Cleaning and maintenance	2
Technical date	2

Warranty

Turn Page

Box contents	3
Hanging	3
Parasol mounting	4
Description and features	4
Assembly (Poling & Table)	5
Troubleshooting	5

Safety instructions

WARNING - When using electrical appliances, basic safety precautions should always be followed. Failure to comply with these instructions may cause a fire, electrical shocks or other injury to persons or property.

- Children of less than 3 years should be kept away unless continuously supervised.
- Children between 3 and 8 years old should only be allowed to switch the appliance on/off, provided that it has been correctly installed in its intended operating position and they have been given supervision or instruction concerning the safe use of the appliance and understand the hazards involved. They should not plug in, regulate, perform maintenance or clean the appliance.
- CAUTION** — Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- DO NOT** position the heater on soft surfaces or where openings may become blocked. Ensure the base is fitted and fully assembled, and the unit is upright on a flat stable surface before operating. This heater is designed for use on Patios and in Beer gardens & smoking areas. The unit has been IP55 Weatherproof approved; however, to prolong the life of the heater it is strongly recommended that the heater is stored in a dry place during heavy rain and when not in use cover the appliance with the cover provided.
- DO NOT** hide the power cord in long grass or leave close to an operating lawnmower. Arrange the cord away from areas where it may be tripped over.
- DO NOT** insert or allow objects to touch the heating element and never place anything on the heater safety guard (e.g. towels), as this may damage the heater and could cause an electrical shock or fire. Never use your heater to dry washing. If the heating element has stopped glowing it may still be live, please check that the heat setting indicates the heater is off.
- Always disconnect your appliance from the mains before any cleaning.
- DO NOT** use the heater in areas where petrol, paint, or other flammable substances are stored.
- Always unplug the heater when not in use. To disconnect from the power supply, grip the plug and pull from the power socket. Never pull by the cord.
- WARNING:** To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the air outlet.
- Extreme care should be taken when the heater is used near children and pets.
- In order to avoid overheating, do not cover the heater.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never locate the heater where it may fall into a swimming pool or other

water container. Never use in a bathroom or shower room. Heater should not be positioned directly under a socket outlet.

- Do not use this heater in conjunction with a timer device or any other device, which facilitates unattended switch on.
- The electrical cord must be fully unwound before use.
- The front grille is intended to prevent direct access to the heating elements and must be in place when the heater is on.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if, they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance. Cleaning and maintenance should not be attempted by children without supervision.
- WARNING:** This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- Do not use this heater if it has been dropped. Do not use if there are visible signs of damage to the heater. Use this heater on a horizontal and stable surface, or fix it to the wall, as applicable.

General information

This product has been designed for domestic and commercial use, to heat outdoor or indoor spaces using energy efficient carbon fibre infrared technology. It must only be used for this intended purpose and should be operated according to the instructions included in this manual. Please carefully read all operating and safety instructions before use. You may also find this manual's content at www.warmwatcher.com

Cleaning and maintenance — Before cleaning, turn the heater off, unplug from the power supply and wait for the unit to cool down.

- Use a soft cloth to wipe off any dust. If the heater is very dirty, use a damp cloth and wipe dry. Do not use any cleaning detergents, sprays or other chemicals, as they will damage the unit.
- The product is IP55 weatherproof certified. It is designed to withstand tough rain conditions. We recommend that you should cover or store in a dry place when not in use for long periods of time.

Technical data


Model No.: MHT306 / MHT307 / MHT308 / MHT309 / MHT308T / MHT309T
Power output : 1500W 110-240v AC ~ 50/60Hz -- see Rating Label
Heater watts : 750W / 1500W or as per Rating label
Cable length : 1.9m or as per outer box
Gross/Net weight : 3.4/2.3; 3.5/2.4; 16/13.4; 16.1/13.5kgs or as per outer box
Product Dimension: MHT306/MHT307 38cm*38cm*20.5cm
MHT308/MHT309 55cm Cross base(or round of ø45cm) * 201cm high
MHT308T/MHT309T ø45cm (Base) * ø60cm (Table) * 201cm high



Box contents


A 	B 	C 	D 	E
1 X Heater body	1 X Instruction Manual	C, 1 X Ceiling Sleeve Anchor set & 1 X Hanging - Central Loop Set	D, Parasol mounting set - 3 X Side Loops with washers	E, 3 X Chains
F 	G 	H 	I 	J
F/G, 1 X Cable and its 2 X Strip Fixer with Screws	H, 3 X Poles	I, 1 X Base (could be round)	J, 3 X Nuts with spring Washers & flat Washers	J (for North America only), Fix set: 1X Concrete Anchor screw + Connecting plate and Nuts with washers
K 	L 	M 	N 	O
1 X Tabletop with built-in bracket + 1 X Decorative rubber Cup (down left), Ring fastener + 3 Screws & 2 Nuts	1 X Storage cover (optional)			

Hanging instructions (Ceilpara type)

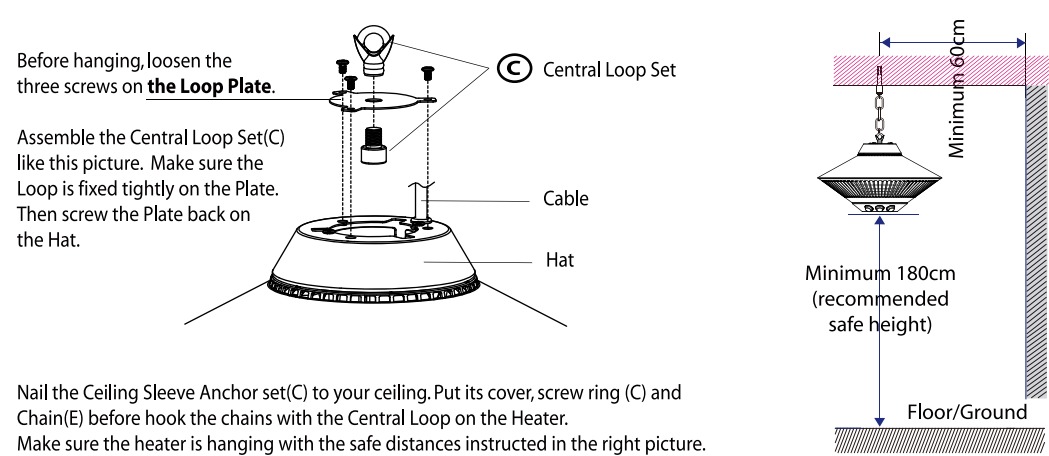

Parasol mounting instructions (Ceilpara type)


Heater could be mounted under Parasol of **Side-post type** or **Pully type** (pole diameter max 50mm). When closing the Parasol, please wait till the Heater cools down. It is not necessarily to take the Heater off but just to loosen the Chains.

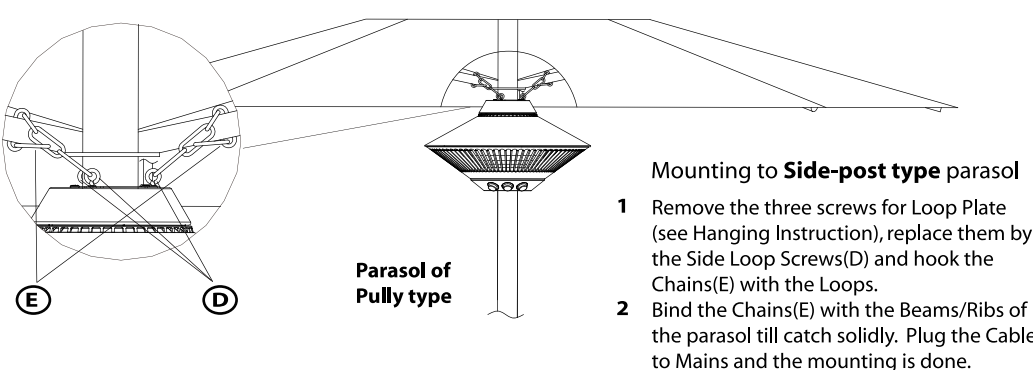

Mounting to parasol of Pully type

- Remove the Loop Plate and its three screws from the Hat (see Hanging Instruction). Fasten the Side Loop Screws(D) into the three screw holes. Then hook the Chains(E) with Ds.
- Using a tool to push out the Central Hole Filler from the top of the Heater through its central hole — right picture.
- Slide the Heater(A) through its central hole upto the bottom position of the Beams/Ribs of the parasol. Use the Chains(E) to bind the Beams/Ribs till catch them solidly. Plug the Cable to Mains and the mounting is done.

Description and features

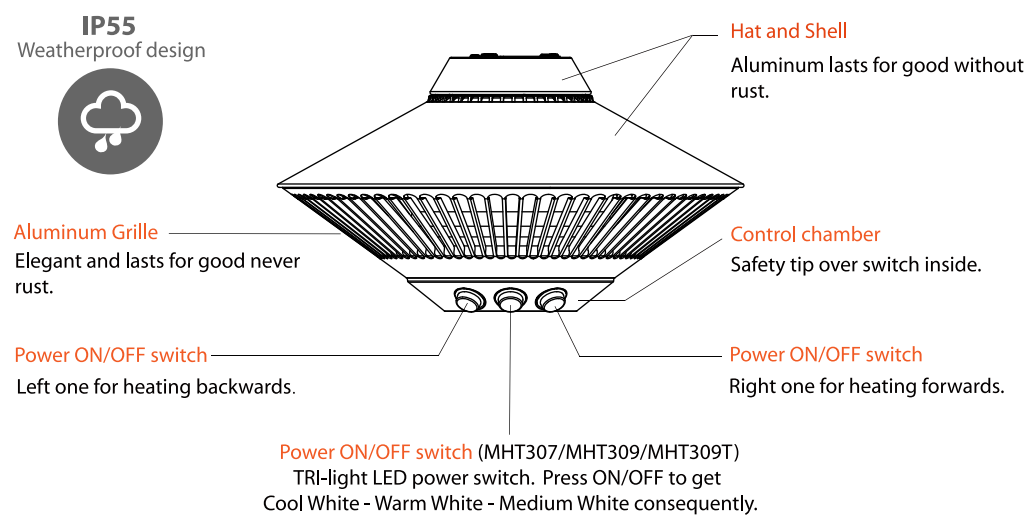

Assembly (Poling & Table type)

Lie Heater body(A) on its box/filling to avoid scratching and for easy assembly with the Pole/Base.

- S.1(Step 1)** Before assembly, unfasten the Two screws on the Hat and remove the Hat. Then unfasten the Three screws on the Flange of Pole H1.
S.2 Insert Pole H1 into H2 at position between the Level marks. Fix the Pole by rolling the Plastic Fastener at the showing direction.
S.3 Pull out the Fixed Cable, insert it through Pole H1 from its end with Flange. Then insert the H1 through central hole of the Heater from the top. Align the holes of the Flange, Hat, fasten them with the Three screws and then, fasten the Hat back with the Two Screws which you removed them at first place.
- Insert the Cable(F) through the Pole H3 (from its end with flange), the Base(L) from its bottom side, the Pole H2 (from its end without plastic part) consequently. For Table type MHT308T/MHT309T, before the Pole H2, insert the Cable through the Ring fastener, Tabletop and Decorative rubber Cup(K) as shown in Picture 4.
- Then connect the Cable(F) with the Fixed cable from the Heater as shown in Pic 2. Better to plug in the Mains and turn on the heater to check the connection is tight before go further.
- Roll H2 with H3 on their threads to fasten them together. Then insert H1 into H2 as shown in Pic 3. Adjust the height then roll the Plastic Fastener to fix the two Poles. For Table type, move the Tabletop to desired height and fix it by a spanner & screw driver (Pic 4). Put the Decorative rubber Cup in position between the Pole & Table.
- Drive the 3 Nuts & Washers (I, flat Washer, spring Washer, Nut consequently) to the thread bolts on the bottom of the Base till the pole fixed to the Base tightly — Pic 5. Pull the Cable(E) gently till feeling there is no extra curve in the Pole and then fix the cable with the two Strip Fixers/Screws(G) at the bottom side of the Base.
- (For North America)** Drive the Concrete Anchor screw(J) to the ground or the place desired. Connect the Base through its built-in bolt screw with the Anchor screw by the plate, Nuts & washers(J) and the assembly is done (Pic 5).

Trouble shooting

Problem	Possible cause	Solution
Heater or Light won't operate	Power Switch OFF No Power to unit	Turn Power Switches ON. Check the mains or the electrical socket to restore circuit. For Poling/Table type, also check the cable receptacle is solidly connected or not (refer to Page 5 Assembly Pic 2.).
	Power Cord damaged	Inspect power cable for cuts, breaks and kinks. Replacement power cords and fitting instructions can be obtained from the technical helpdesk — see warranty card.
Heater not on right level or Safety tip-over Switch malfunction		There is a Tilt Switch so ensure the Heater is at horizontal level. Give the unit a rigorous shake which may reset the switch. If this does not rectify the problem, please call the technical helpdesk — see warranty card.



Please complete this form and fax or email to the numbers below. Please return with a receipt to your retailer if your product becomes faulty

Your name

Your address

Email address

Postcode

Product name Model number

Batch Code

(located on the rating label on the rear of the unit)

Place of purchase

Date of purchase