


Mars  
Ceilpara type



Mars  
Fishing with Hood

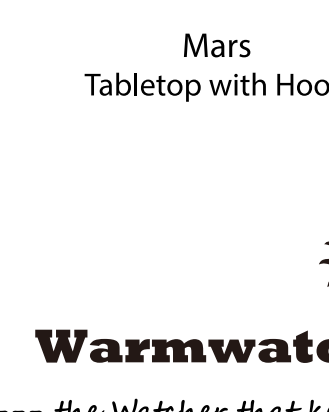


Mars  
Tabletop with Hood



Mars  
Poling type



Mars  
Table type



Warmwatcher®

--- the Watcher that keeps you warm

Mars Ceilpara / Poling / Table / Tabletop / Fishing outdoor heater

Instruction Manual En -04

Contents	
Safety instructions	1
General information - Cleaning and maintenance	2
Technical date	2
Warranty	Turn Page
Box contents	3
Hanging	3
Parasol mounting	4
Description and features	4
Assembly (Poling & Table)	5
Troubleshooting	5

**Safety instructions**

**WARNING - When using electrical appliances, basic safety precautions should always be followed. Failure to comply with these instructions may cause a fire, electrical shocks or other injury to persons or property.**

- Children of less than 3 years should be kept away unless continuously supervised.
- Children between 3 and 8 years old should only be allowed to switch the appliance on/off, provided that it has been correctly installed in its intended operating position and they have been given supervision or instruction concerning the safe use of the appliance and understand the hazards involved. They should not plug in, regulate, perform maintenance or clean the appliance.
- CAUTION** — Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- DO NOT** position the heater on soft surfaces or where openings may become blocked. Ensure the base is fitted and fully assembled, and the unit is upright on a flat stable surface before operating. This heater is designed for use on Patios and in Beer gardens & smoking areas. The unit has been IP55 Weatherproof approved; however, to prolong the life of the heater it is strongly recommended that the heater is stored in a dry place during heavy rain and when not in use cover the appliance with the cover provided.
- DO NOT** hide the power cord in long grass or leave close to an operating lawnmower. Arrange the cord away from areas where it may be tripped over.
- DO NOT** insert or allow objects to touch the heating element and never place anything on the heater safety guard (e.g. towels), as this may damage the heater and could cause an electrical shock or fire. Never use your heater to dry washing. If the heating element has stopped glowing it may still be live, please check that the heat setting indicates the heater is off.
- Always disconnect your appliance from the mains before any cleaning.
- DO NOT** use the heater in areas where petrol, paint, or other flammable substances are stored.
- Always unplug the heater when not in use. To disconnect from the power supply, grip the plug and pull from the power socket. Never pull by the cord.
- WARNING:** To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the air outlet.
- Extreme care should be taken when the heater is used near children and pets.
- In order to avoid overheating, do not cover the heater.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never locate the heater where it may fall into a swimming pool or other

Box contents

A

1 X Heater body

B

1 X Instruction Manual

C

Ceilpara Type:  
C, 1 X Ceiling Sleeve Anchor set & 1 X Hanging - Central Loop Set  
D, Parasol mounting set -> 3 X Side Loops with washers  
E, 3 X Chains

F

Poling or Table Type:  
F/G, 1 X Cable and its 2 X Strip Fixer with Screws  
H, 3 X Poles  
I, 1 X Base (could be round) & 3 X Nuts with spring Washers & flat Washers  
J (for North America only), Fix set: 1X Concrete Anchor screw + Connecting plate and Nuts with washers

K

Table Type:  
1 X Tabletop with built-in bracket + 1 X Decorative rubber Cup (down left), Ring fastener + 3 Screws & 2 Nuts

L

1 X Storage cover (optional)

Hanging instructions (Ceilpara type)

Before hanging, loosen the three screws on the Loop Plate.

Assemble the Central Loop Set (C) like this picture. Make sure the Loop is fixed tightly on the Plate. Then screw the Plate back on the Hat.

Nail the Ceiling Sleeve Anchor set (C) to your ceiling. Put its cover, screw ring (C) and Chain (E) before hook the chains with the Central Loop on the Heater. Make sure the heater is hanging with the safe distances instructed in the right picture.

Central Loop Set

Cable

Hat

Minimum 60cm

Minimum 180cm (recommended safe height)

Floor/Ground

Parasol mounting instructions (Ceilpara type)

Heater could be mounted under Parasol of Side-post type or Pulley type (pole diameter max 50mm). When closing the Parasol, please wait till the Heater cools down. It is not necessarily to take the Heater off but just to loosen the Chains.

Mounting to Side-post type parasol

1 Remove the three screws for Loop Plate (see Hanging Instruction), replace them by the Side Loop Screws (D) and hook the Chains (E) with the Loops.

2 Bind the Chains (E) with the Beams/Ribs of the parasol till catch solidly. Plug the Cable to Mains and the mounting is done.

Mounting to parasol of Pulley type

1 Remove the Loop Plate and its three screws from the Hat (see Hanging Instruction). Fasten the Side Loop Screws (D) into the three screw holes. Then hook the Chains (E) with Ds.

2 Using a tool to push out the Central Hole Filler from the top of the Heater through its central hole - right picture.

3 Slide the Heater (A) through its central hole up to the bottom position of the Beams/Ribs of the parasol. Use the Chains (E) to bind the Beams/Ribs till catch them solidly. Plug the Cable to Mains and the mounting is done.

Description and features

IP55 Weatherproof design

Aluminum Grille  
Elegant and lasts for good never rust.

Power ON/OFF switch  
Left one for heating backwards.

Hat and Shell  
Aluminum lasts for good without rust.

Control chamber  
Safety tip over switch inside.

Power ON/OFF switch  
Right one for heating forwards.

Power ON/OFF switch (MHT307/MHT309/MHT309T)  
TRI-light LED power switch. Press ON/OFF to get Cool White - Warm White - Medium White consequently.

Assembly (Poling & Table type)

Lie Heater body (A) on its box/filling to avoid scratching and for easy assembly with the Pole/Base.

S.1 (Step 1)  
Before assembly, unfasten the Two screws on the Hat and remove the Hat. Then unfasten the Three screws on the Flange of Pole H1.

S.2  
Pull out the Fixed Cable, insert it through Pole H1 from its end with Flange. Then insert the H1 through central hole of the Heater from the top. See Pic 1. Align the holes of the Flange, Hat, fasten them with the Three screws and then, fasten the Hat back with the Two Screws which you removed them at Step 1.

1

2

3

4

5

Hat

Flange on the Pole H1

Fixed Cable from the Heater

Pole H3

Trouble shooting

Problem	Possible cause	Solution
Heater or Light won't operate	Power Switch OFF No Power to unit	Turn Power Switches ON. Check the mains or the electrical socket to restore circuit. For Poling/Table type, also check the cable receptacle is solidly connected or not (refer to Page 5 Assembly Pic 2).
	Power Cord damaged	Inspect power cable for cuts, breaks and kinks. Replacement power cords and fitting instructions can be obtained from the technical helpdesk - see warranty card.
	Heater not on right level or safety tip-over Switch malfunction	There is a Tilt Switch to ensure the Heater is at horizontal level. Give the unit a rigorous shake which may reset the switch. If this does not rectify the problem, please call the technical helpdesk - see warranty card.

Sketch map for assembly the Hood with Heater  
灯罩与火星电暖器组装示意图

灯罩和电暖器的连接螺丝  
Screws to fix the Hood with Heater

电暖器底座  
The Hat

电暖器底座  
The Hat

Sketch map for assembly Fishing Mars  
钓鱼款火星组装机示意图

灯罩和电暖器的连接螺丝  
Screws to fix the Hood with Heater

钓鱼杆和电暖器的连接螺丝套件  
Rod Set to fix the Pole with Heater

电暖器  
Heater

Do recommended - Extra Stability!  
增加额外稳定性

电源线  
Cable

底座  
Base